




# Large Motion TV Mount Instruction Manual

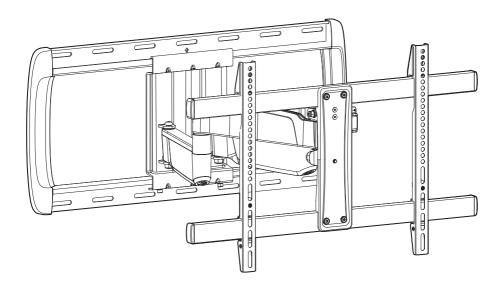

# ERMML5

#### Thank you for choosing ErgoAV!

At ErgoAV, our goal is to add value to your AV experience by providing the highest quality products and services in the industry. We offer a 5-year warranty. If you have any questions or concerns, please contact us.





9501 Louisiana Ave N, #200, Brooklyn Park, MN 55445



(877) 419-7832 Mon-Fri 8am - 8pm (CST)



support@ergoav.com

 


www.ergoav.com

## BEFORE GETTING STARTED, LET'S MAKE SURE THIS MOUNT IS COMPATIBLE



Check VESA Pattern Compatibility



#### Compatible VESA Patterns:

200 x 100mm 300 x 300mm 400 x 400mm 400 x 200mm 200 x 200mm 500 x 400mm 300 x 200mm 400 x 300mm 600 x 400mm

#### Maximum/Minimum:

600 x 400mm (23.6 x 15.7") 200 x 100mm (7.9 x 3.9")


If this mount is not compatible, please contact product support.

Check Max



#### MARNING

DO NOT exceed the Max Load. Use with products heavier than the Max Load may result in failure of the mount and its accessories, causing possible damage and/or injury.

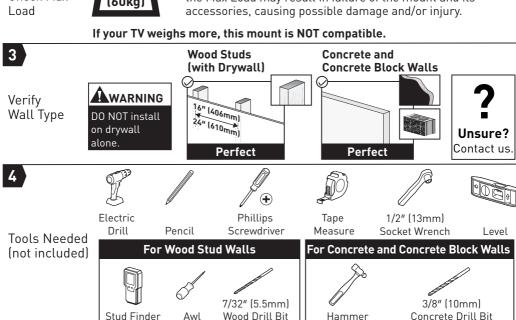



**Important** 

Information

Safety


▲ DANGER: Please carefully read all instructions before attempting installation. If you DO NOT understand the instructions or have any questions or concerns, please call technical support or email customer service.

A CAUTION: Avoid the risk of personal injury and property damage!

▲ WARNING: All fasteners must be firmly tightened!

- This mount can only be installed on wood studs, concrete and concrete block walls. DO NOT install on drywall alone.
- The wall must be capable of supporting four times the weight of the TV and mount combined.
- This product contains small parts that may pose a choking hazard.
- DO NOT use this product for any purpose that is NOT explicitly specified in this manual. DO NOT exceed the maximum weight capacity. We are not liable for damage or injury caused by incorrect assembly, improper mounting, or inappropriate use.
- Use this mounting system only for its intended purpose as described in these instructions. DO NOT use attachments not recommended by the manufacturer.
- DO NOT use outdoors.
- Route cords and cables properly to avoid mechanical damage.

#### SAVE THESE INSTRUCTIONS

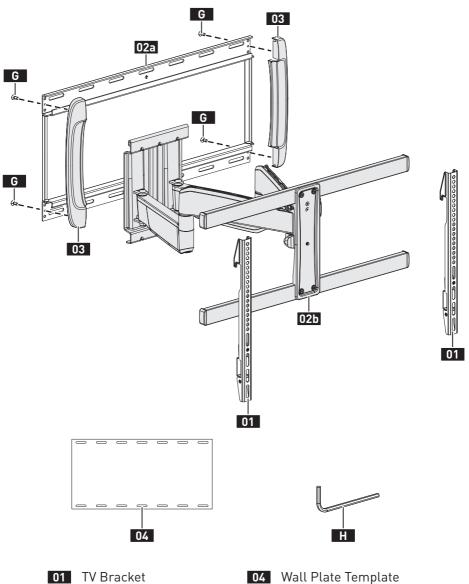

03 End Cap

02a 02b

Wall Plate


Arm assembly

- 04 Wall Plate Template
- **G** Bolt
- H Allen Key

## **INSTALLATION**
 
## Supplied Parts and Hardware for Step 1

Not all hardware included in this package will be used.



TV Bracket

01 x 2











M4/M5 Washer B1 x 4







L22mm Spacer F3 x 4

**M4** 





**M8** 



M4 x 12mm TV Bolt C1 x 4 M4 x 30mm TV Bolt C2 x 4 M8 x 15mm TV Bolt E1 x 4



M8 x 35mm TV Bolt **E2** x 4

**M6** 






M6 x 15mm TV Bolt D1 x 4 M6 x 35mm TV Bolt **D2** x 4




M8 x 50mm TV Bolt

## STEP 1 Attach the TV Brackets to Your TV

#### 1-1 Select TV Bolts

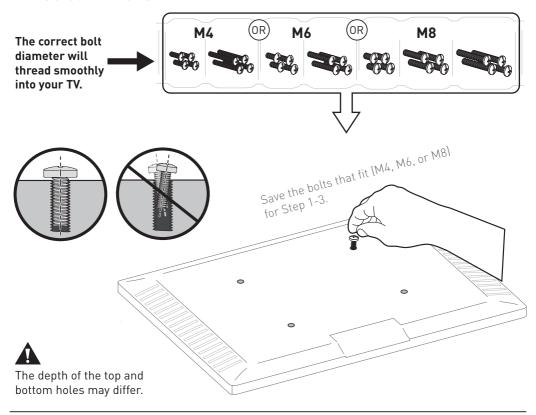

## 1-2 Position the TV Brackets

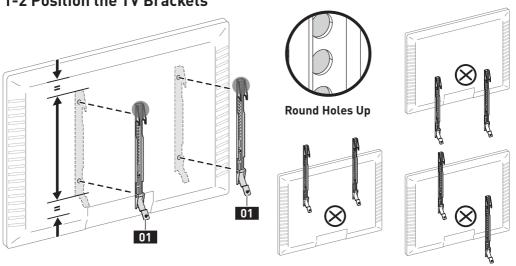

#### 1-3 Secure the TV Brackets


For Flat-Back TV, go to Option A on this page.
For Bump, Curved TV, Recessed Holes and Cables, go to Option B on next page.


# **M** WARNING:

- DO NOT turn the bolt past the bottom of the hole.
- If the bolt is too short, it may not adequately support the TV.
- If the bolt is too long, it could damage the TV.
- At least 4-5 turns into the threading is required.
- The depth of the bottom holes may be different from the top holes.





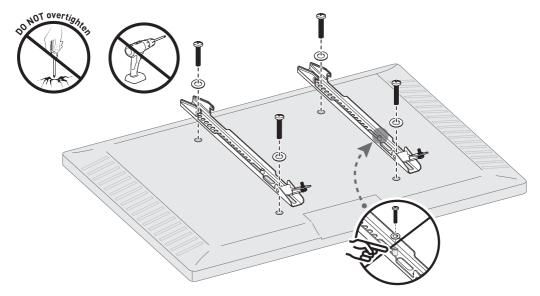

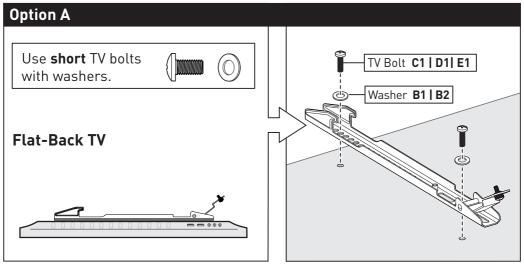

# **Option B**

Use **long** TV bolts with washers and spacers to create extra space between the TV and brackets.

 










#### **Bump**




# TV with Mounting Restrictions

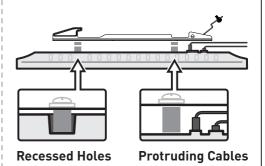

#### **Curved TV**

 

 

You can use a tape measure to measure the protruding bolts or hold spacers next to them to choose the right spacer combination.



## A Note:

There are many possible spacer combinations that can be used.






(877) 419-7832


Mon-Fri 8am - 8pm (CST)

⋈


support@ergoav.com

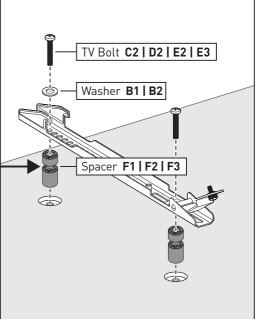

# Supplied Parts and Hardware for Step 2 Included in 02 Arm Assembly / M4 x 10mm Wall Plate Arm Assembly Wall Plate End Cap Bolt **02** x 1 **02a** x 1 **02b** x 1 **03** x 2 **G** x 4 STEP 2 Attach the End Caps to the Wall Plate 02b 02a 02b 02a

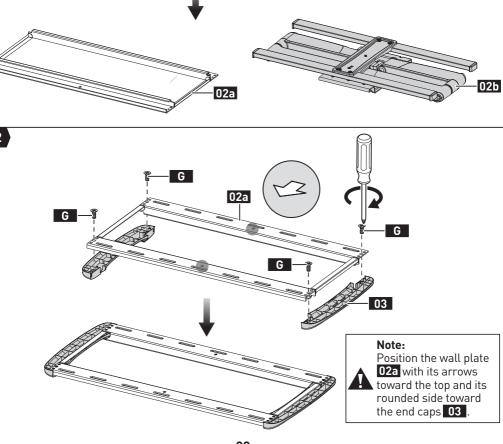

## Supplied Parts and Hardware for Step 3

 

Wall Plate Template

04 x 1



ST 5/16 x 2 3/4" Lag Screw



A CAUTION!


This anchor is for concrete and concrete block walls ONLY. DO NOT use them in drywall or wood studs.

Wall Anchor

# STEP 3 Mount the Wall Plate on the Wall

For mounting on wood stud walls, go to Option A on page 09 to 10.

For mounting on concrete and concrete block walls, go to Option B on page 11 to 12.

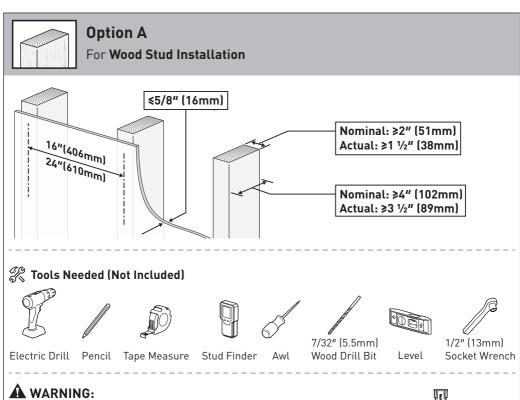



- Avoid the risk of personal injury or property damage! Tighten the lag screws A1 only until they are pulled firmly against the wall plate (D0 NOT overtighten). D0 NOT use a drill; only use a socket wrench.
- DO NOT use wall anchors A2 for this mounting option.



**A2** Wall Anchor


#### Find Studs and Mark Holes

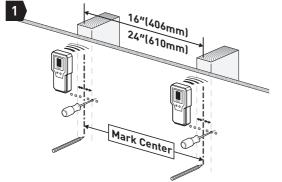

 

# 2


#### Mark 4 Hole Positions

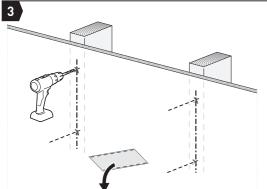


#### **Drill 4 Holes**



**Note:** Be sure to use the specified drill bit.

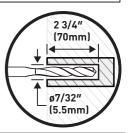

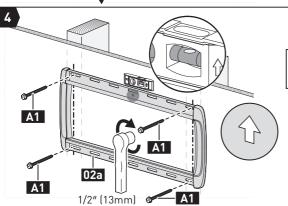


#### Secure the Wall Plate




**HEAVY!** You may need assistance with this step.




Go to Step 4 on Page 13

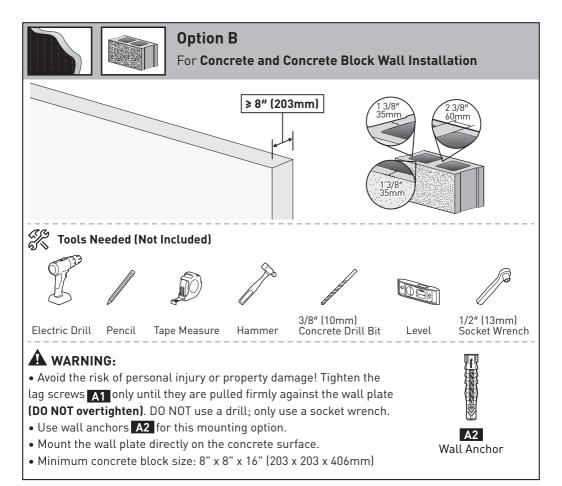

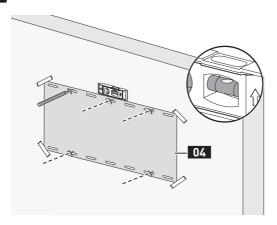

#### Mark 5 Hole Positions

#### **Drill 5 Holes**

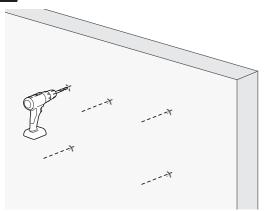







 - Be sure to use the specified drill bit.
- Never drill into the mortar between blocks.






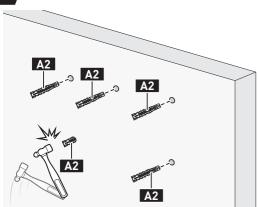

Tap Wall Anchors In





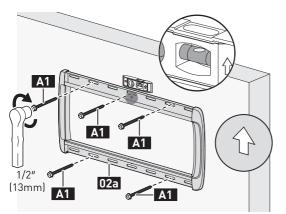

## Secure the Wall Plate








**HEAVY!** You may need assistance with this step.




# **STEP 4** Verify Wall Plate is Firmly Mounted

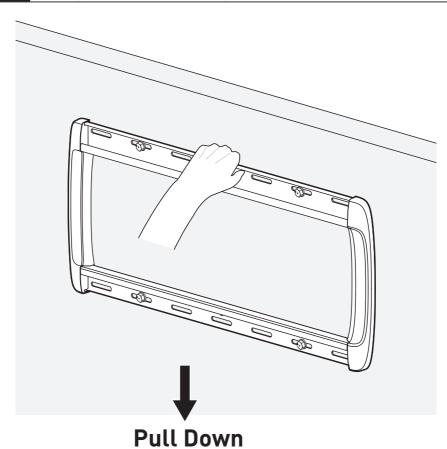

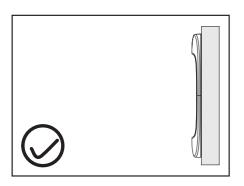


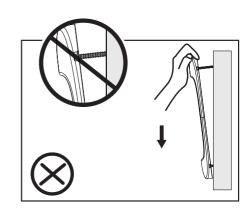

# Supplied Parts and Hardware for Step 5

 

# STEP 5 Attach the Arm Assembly to the Wall Plate

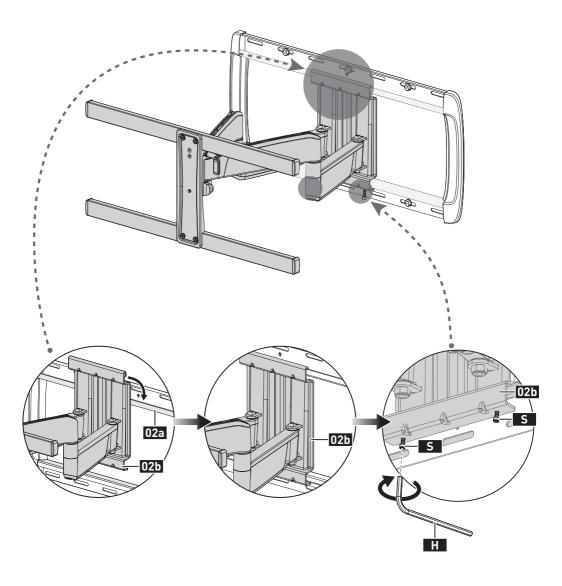


# STEP 6 Hang the TV on the Front Support






#### Note:

Flip the safety locks down on the TV brackets before hanging the TV.

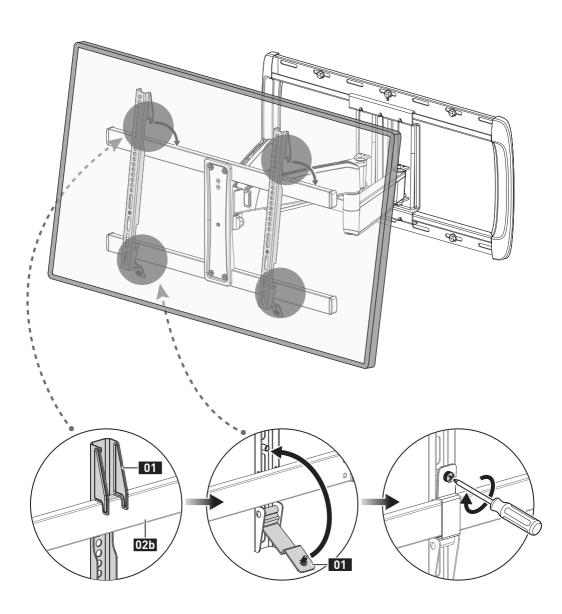


# STEP 7 Level Adjustment

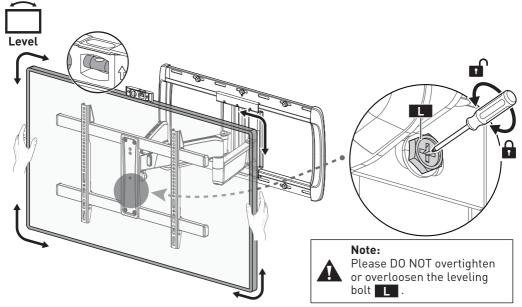


Level your TV using a level. If it is difficult to level your TV, slightly loosen the leveling bolt then level your TV. Retighten the leveling bolt to hold the TV in position.

# STEP 8 Tilt Adjustment

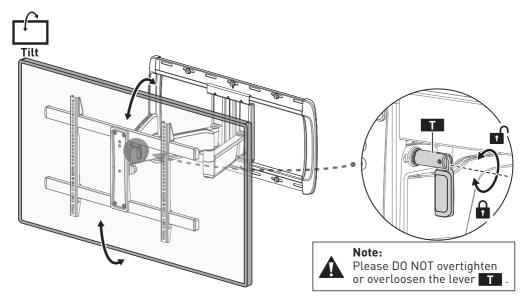


Slightly loosen the lever **T**. Tilt the TV to the desired angle. Retighten the lever **T** to hold the TV in position.

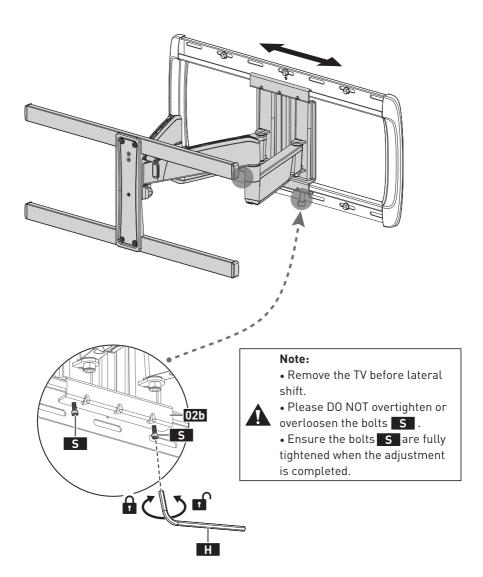


Slightly loosen the bolts S. . Move the arm assembly to the desired position. Retighten the bolts **S** to hold the arm assembly in position.

# STEP 10 Cable Management

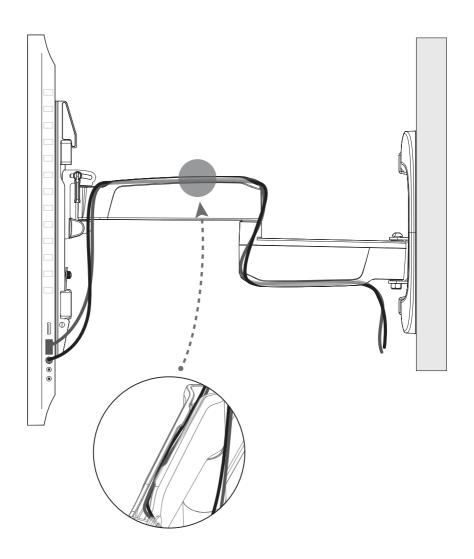



At ErgoAV, our goal is to provide the high-quality audio video solutions and product support that you need. If you have any questions, concerns, or feedback, please let us know!

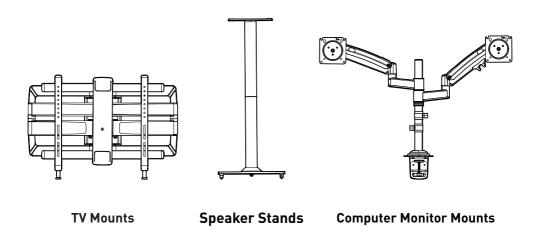

ErgoAV

9501 Louisiana Ave N, #200, Brooklyn Park, MN 55445

📞 (877) 419-7832 Mon-Fri 8am - 8pm (CST)

support@ergoav.com

www.ergoav.com