


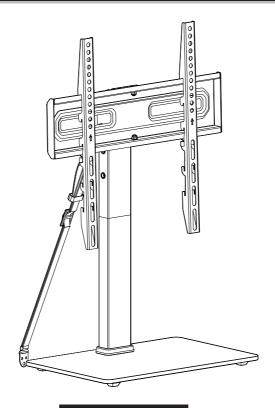

Tabletop TV Stand Instruction Manual



ERTSM3

Thank You for Choosing ErgoAV!

At ErgoAV, our goal is to add value to your AV experience by providing the highest quality products and services in the industry. We offer a 5-year warranty. If you have any questions or concerns, please contact us.

EngoAV

9501 Louisiana Ave N, #200, Brooklyn Park, MN 55445

(877) 419-7832 Mon-Fri 8am - 8pm (CST)

support@ergoav.com




www.ergoav.com

BEFORE GETTING STARTED, LET'S MAKE SURE THIS STAND IS COMPATIBLE

1

Check VESA Pattern Compatibility

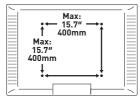

Compatible VESA Patterns:

 100 x 100mm
 200 x 200mm
 300 x 300mm

 100 x 200mm
 200 x 300mm
 400 x 200mm

 200 x 100mm
 300 x 200mm
 400 x 300mm

Maximum/Minimum:

400 x 400mm (15.7 x 15.7") 100 x 100mm (3.9 x 3.9")

If this stand is not compatible, please contact product support.

2



WARNING

DO NOT exceed the Max Load. Use with products heavier than the Max Load may result in failure of the mount and its accessories, causing possible damage and/or injury.

If your TV weighs more, this stand is NOT compatible.

3

Verify Wall Type



alone.



Concrete and Concrete Block Walls



Hammer

For safety strap installation, you will need to verify your wall construction.

4









5/16" (8mm)

Concrete Drill Bit

400 x 400mm

Tools Needed (not included)



For safety strap installation into concrete

5

Important

Information

Safety

▲ DANGER: Please carefully read all instructions before attempting installation. If you DO NOT understand the instructions or have any questions or concerns, please call technical support or email customer service.

CAUTION: Avoid the risk of personal injury and property damage!

▲ WARNING: All fasteners must be firmly tightened!

• This product contains small parts that may pose a choking hazard.


• DO NOT use this product for any purpose that is NOT explicitly specified in this manual. DO NOT exceed the maximum weight capacity. We are not liable for damage or injury caused by incorrect assembly, improper mounting, or inappropriate use.

Use this mounting system only for its intended purpose as described in these instructions. DO NOT use attachments not recommended by the manufacturer.

TIP-OVER WARNING: Serious or fatal crushing injuries can occur from a tip-over accident.

To help prevent a tip-over accident:

- Never allow children to climb, stand, hang, or play on any part of the TV or TV stand.
- Use tip-over restraints or anchors to attach the TV stand to the wall.
- Use of tip-over restraints may only reduce, but not eliminate risk of a tip-over accident. **SAVE THESE INSTRUCTIONS**

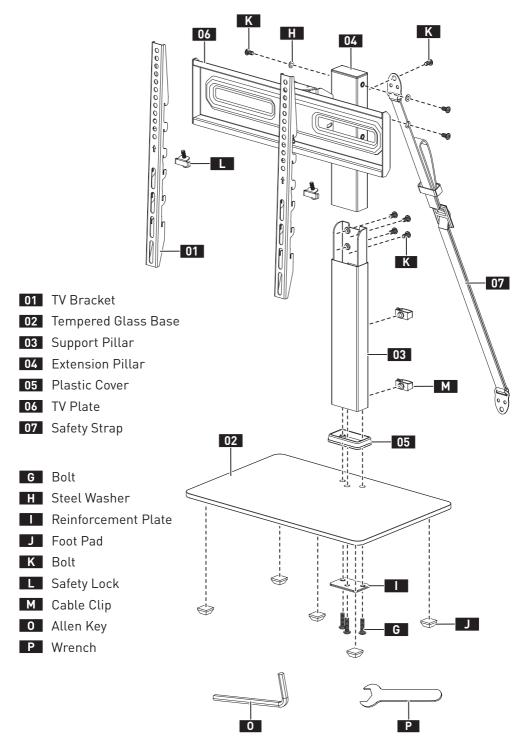

INSTALLATION

Supplied Parts and Hardware for Step 1

Not all hardware included in this package will be used.



TV Bracket **01** x 2



M4/M5 Washer





M6/M8 Washer





L2.5mm Spacer **F1** x 8



L10mm Spacer





L22mm Spacer



M4



M4 x 12mm TV Bolt





M4 x 30mm TV Bolt

C2 x 4

M8



M8 x 25mm TV Bolt **E1** x 4

M6



M6 x 15mm TV Bolt **D1** x 4




M6 x 35mm TV Bolt

D2 x 4




M8 x 50mm TV Bolt **E2** x 4

STEP 1 Attach the TV Brackets to Your TV

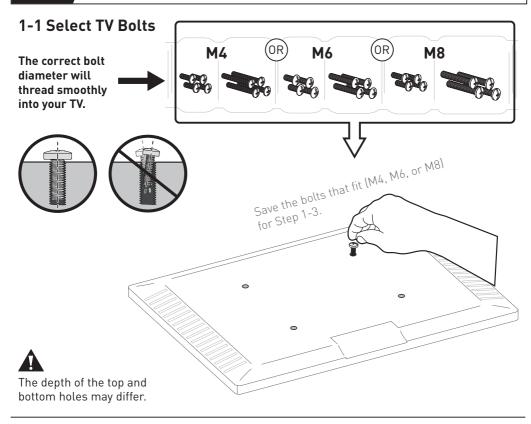

1-2 Position the TV Brackets

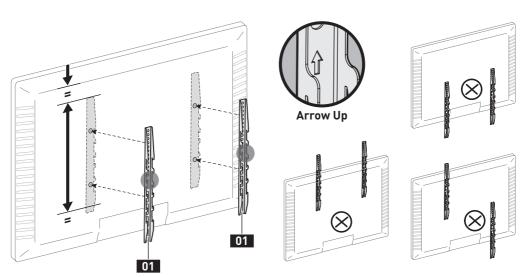

1-3 Secure the TV Brackets


For Flat-Back TV, go to Option A on this page. For Bump, Curved TV, Recessed Holes and Cables, go to Option B on next page.


A WARNING:

- DO NOT turn the bolt past the bottom of the hole.
- If the bolt is too short, it may not adequately support the TV.
- If the bolt is too long, it could damage the TV.
- At least 4–5 turns into the threading is required.
- The depth of the bottom holes may be different from the top holes.



Too Short Too Long

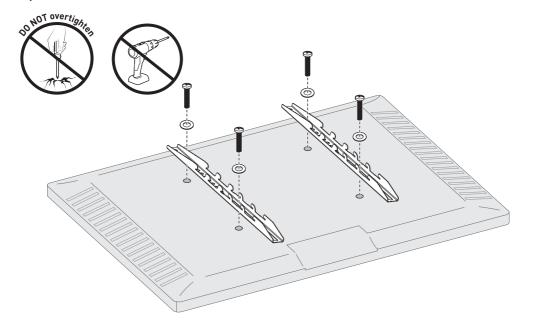

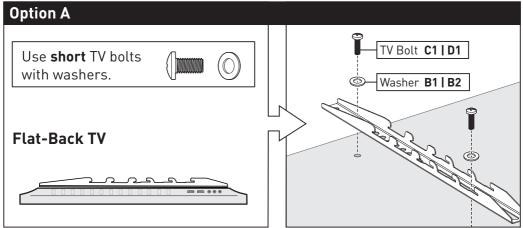

Option B

Use **long** TV bolts with washers and spacers to create extra space between the TV and brackets.













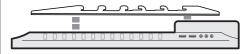


TV with Mounting Restrictions

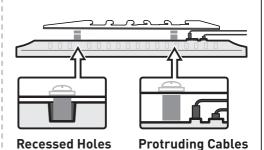

Curved TV



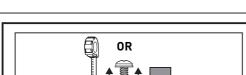

You can use a tape measure to measure the protruding bolts or hold spacers next to them to choose the right spacer combination.



A Note:

Measure

There are many possible spacer combinations that can be used.






[877] 419-7832

Mon-Fri 8am - 8pm (CST)

Compare



support@ergoav.com

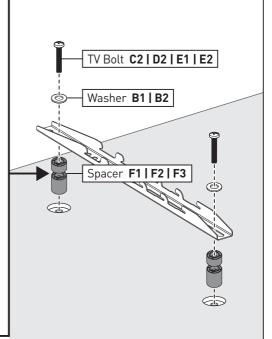











Tempered Glass Base

Support Pillar **02** x 1 **03** x 1

Extension Pillar

Plastic Cover

M6 x 25mm Bolt



04 x 1

05 x 1







Reinforcement Plate **1** x 1


Foot Pad J x 5

M6 x 15mm Bolt **K** x 4


5/23" (4mm) Allen Key


0 x 1

Connect the Support Pillar to the Base

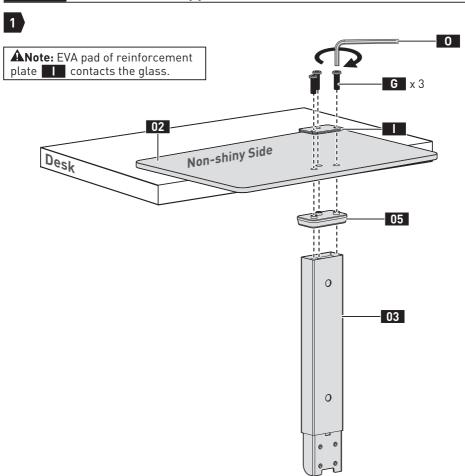



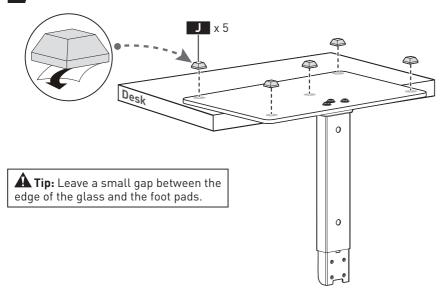

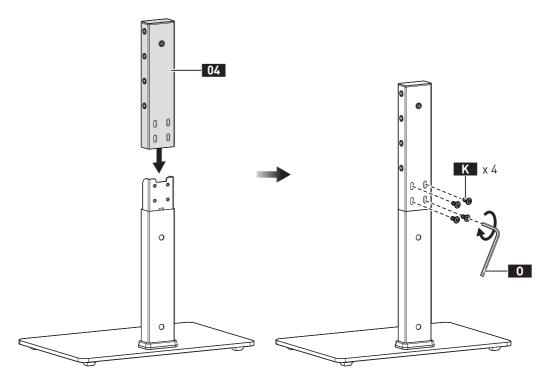



TV Plate

06 x 1



M6 Steel Washer



M6 x 15mm Bolt







5/23" (4mm) Allen Key



STEP 3 Secure the TV Plate to the Extension Pillar

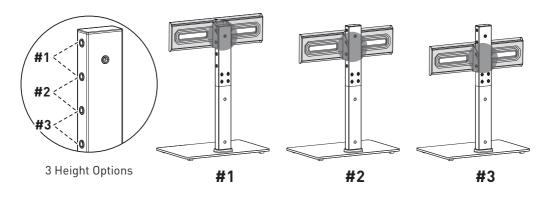

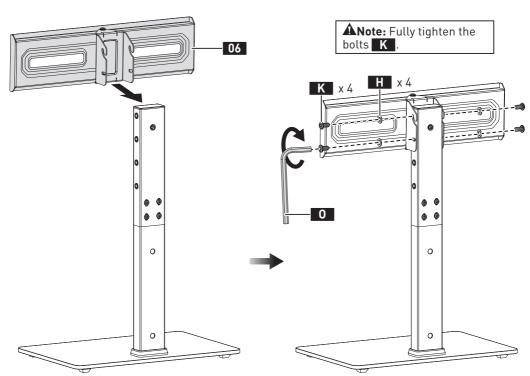



Important: If using the safety strap, it is recommended to attach it to the extension pillar (see **Step 8 on Page 15**) before hanging the TV.


Supplied Parts and Hardware for Step 4





Safety Lock

L x 2

STEP 4 Hang the TV on the TV Plate

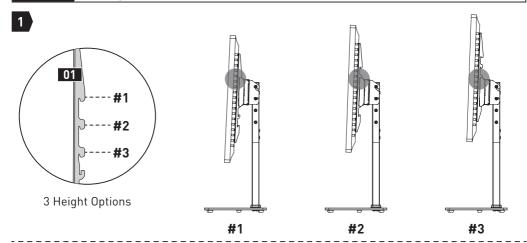

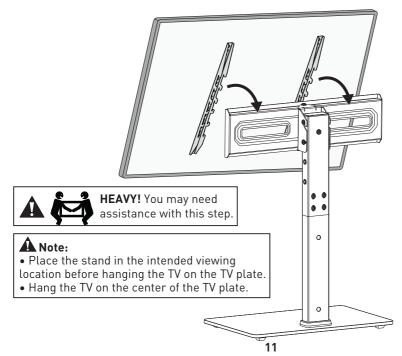

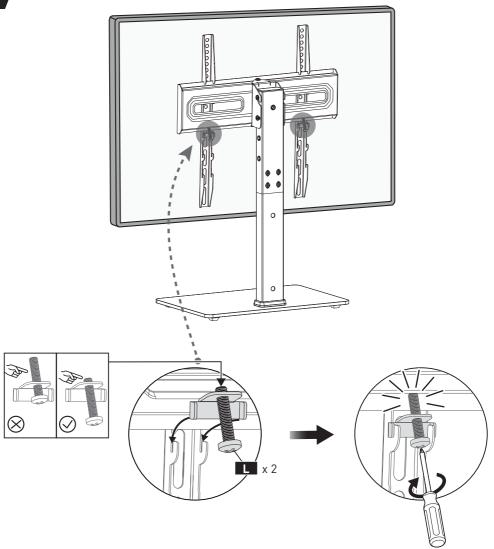

A Note: Tighten the safety locks until they are secure against the TV plate.


Supplied Parts and Hardware for Step 5



Cable Clip

M x 2


STEP 5 Cable Management

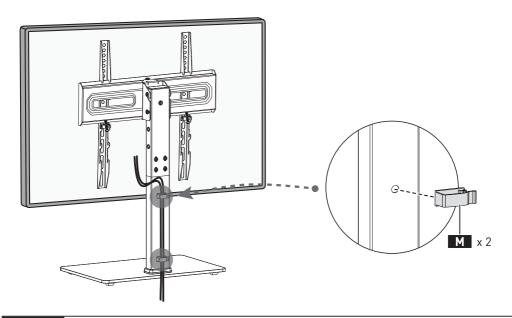


STEP 6 Tilt Adjustment




Slightly loosen the bolts \mathbf{K} . Tilt the TV to the desired angle. Retighten the bolts \mathbf{K} to hold the TV in position.

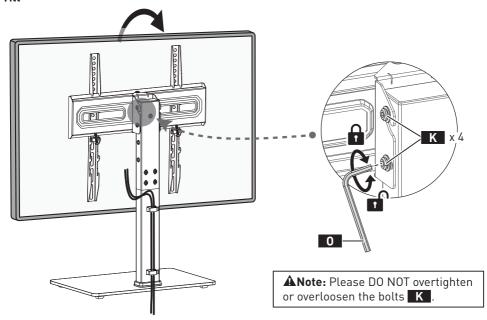


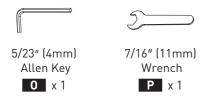

STEP 7 Swivel Adjustment

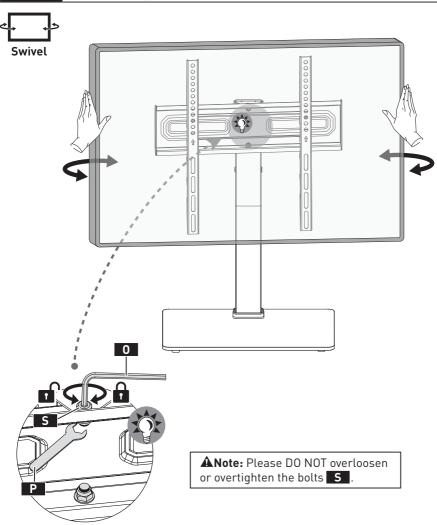


Tip: If the TV is difficult to swivel, remove the TV, slightly loosen the preassembled bolts swivel the TV plate to the desired angle, then retighten the bolts to hold it in position. Reattach the TV.

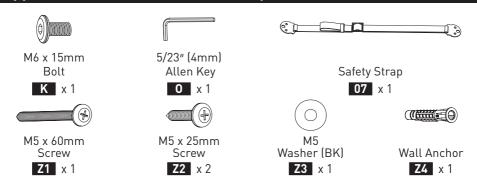

STEP 8 Use the Safety Strap (Optional)

8-1 Attach the Safety Strap to the Extension Pillar

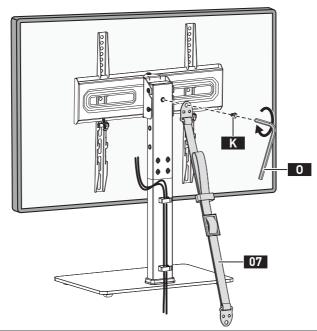

8-2 Attach the Other End of Safety Strap to the Furniture or Wall



For wooden table furniture installation, follow Option A on page 16.



For wood stud installation, follow Option B on page 17.



For concrete and concrete block wall installation, follow Option C on page 18.

Option A: For Wooden Table Furniture Installation


• DO NOT USE ANCHOR Z4 FOR THIS STEP!

Note: It is necessary to predrill a pilot hole to avoid splitting the wood. Be careful not to damage your furniture.




CAUTION: The mounting surface must be thicker than 1" (25mm). If your mounting surface is less than 1" (25mm), please follow Option B or C to mount safety straps to wall.

Z4 Wall Anchor

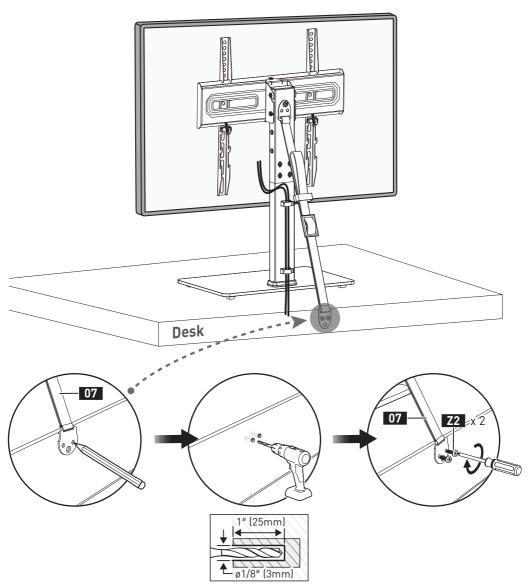


Option B: For Wood Stud Installation


- DO NOT USE ANCHOR Z4 FOR THIS STEP!
- Any material covering the wall must not exceed 5/8" (16mm).
- Nominal wood stud size: common 2 x 4" (51 x 102mm) minimum 1½ x 3½" (38 x 89mm)

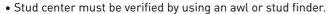





Wall Anchor

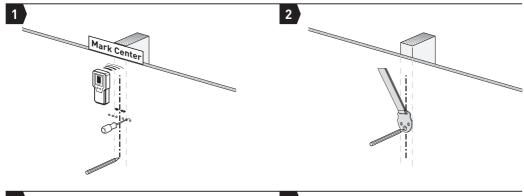

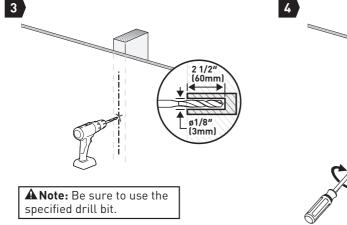


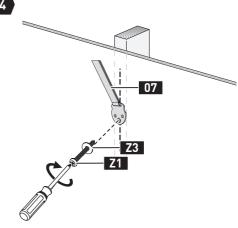


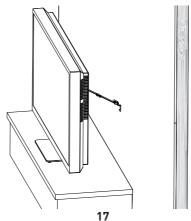

Option C: For Concrete and Concrete Block Wall Installation


- Must use wall anchor **Z4** for this step.
- Any material covering the wall must not exceed 5/8" (16mm).
- Minimum solid concrete thickness: 8" (203mm)
- Minimum concrete block size: 8 x 8 x 16" (203 x 203 x 406mm)

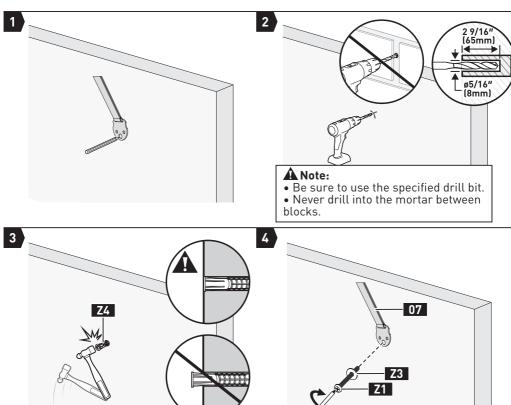

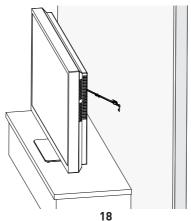



At ErgoAV, our goal is to provide the high-quality audio video solutions and product support that you need. If you have any questions, concerns, or feedback, please let us know!

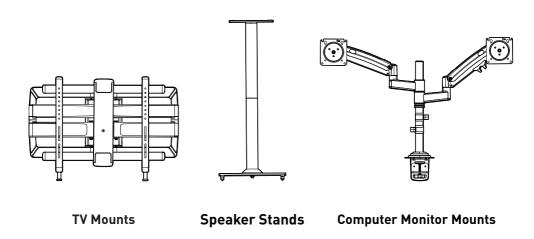

ErgoAV

9501 Louisiana Ave N, #200, Brooklyn Park, MN 55445

📞 (877) 419-7832 Mon-Fri 8am - 8pm (CST)

support@ergoav.com

www.ergoav.com