 




Tabletop TV Stand Instruction Manual

V2

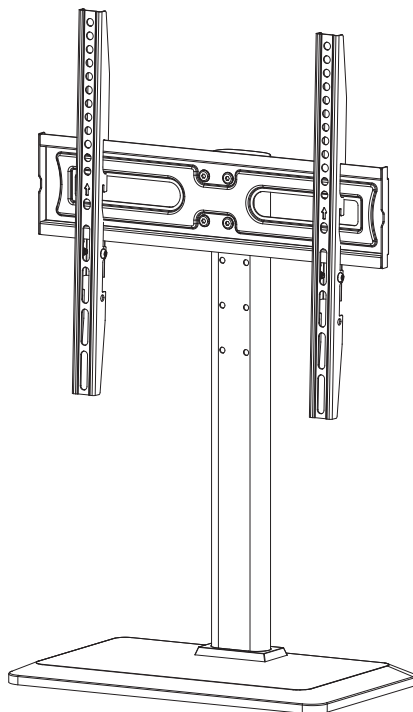

ERTSMH3

Thank you for choosing ErgoAV!

At ErgoAV, our goal is to add value to your AV experience by providing the highest quality products and services in the industry. We offer a 3-year warranty. If you have any questions or concerns, please contact us.



ErgoAV



9501 Louisiana Ave N, #200, Brooklyn Park, MN 55445



(877) 419-7832 Mon-Fri 8am - 8pm (CST)



support@ergoav.com

 


www.ergoav.com

BEFORE GETTING STARTED, LET'S MAKE SURE THIS STAND IS COMPATIBLE.

1

Check VESA Pattern Compatibility

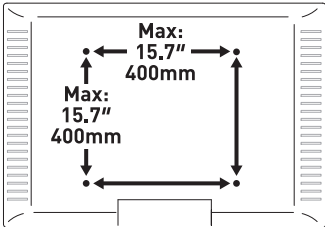

Compatible VESA Patterns:

100 x 100mm	300 x 200mm
100 x 200mm	300 x 300mm
200 x 100mm	400 x 200mm
200 x 200mm	400 x 300mm
200 x 300mm	400 x 400mm

Maximum/Minimum:

400 x 400mm (15.7 x 15.7")
100 x 100mm (3.9 x 3.9")

If this stand is not compatible, please contact product support.

2

Check Max Load



If your TV weighs more, this stand is NOT compatible.

! WARNING

DO NOT exceed the Max Load. Use with products heavier than the Max Load may result in failure of the mount and its accessories, causing possible damage and/or injury.

3

Tools Needed (not included)



Electric Drill



Pencil



Tape Measure



3/8" (10mm) Wood Drill Bit

4

Important Safety Information

! DANGER: Please carefully read all instructions before attempting installation. If you DO NOT understand the instructions or have any questions or concerns, please call technical support or email customer service.

 
! CAUTION: Avoid the risk of personal injury and property damage!

! WARNING: All fasteners must be firmly tightened!

- This product contains small parts that may pose a choking hazard.
- DO NOT use this product for any purpose that is NOT explicitly specified in this manual. We are not liable for damage or injury caused by incorrect assembly, improper mounting, or inappropriate use.
- Use this mounting system only for its intended purpose as described in these instructions. DO NOT use attachments not recommended by the manufacturer.


SAVE THESE INSTRUCTIONS

- 01** TV Bracket
- 02** Base
- 03** Support Pillar
- 04** Washer
- 05** TV Plate
- 06** Drill Template
- 07** Clamping Plate
- 08** Safety Lock
- G** Foot Pad
- H** Plastic Cover
- I** Countersunk Bolt
- J** M6 x 35mm Bolt
- K** M8 x 100mm Bolt
- L** M6 x 12mm Bolt
- M** Cable Clip
- N1** 4mm Allen Key
- N2** M6 Security Torx Key
- N3** M8 Security Torx Key

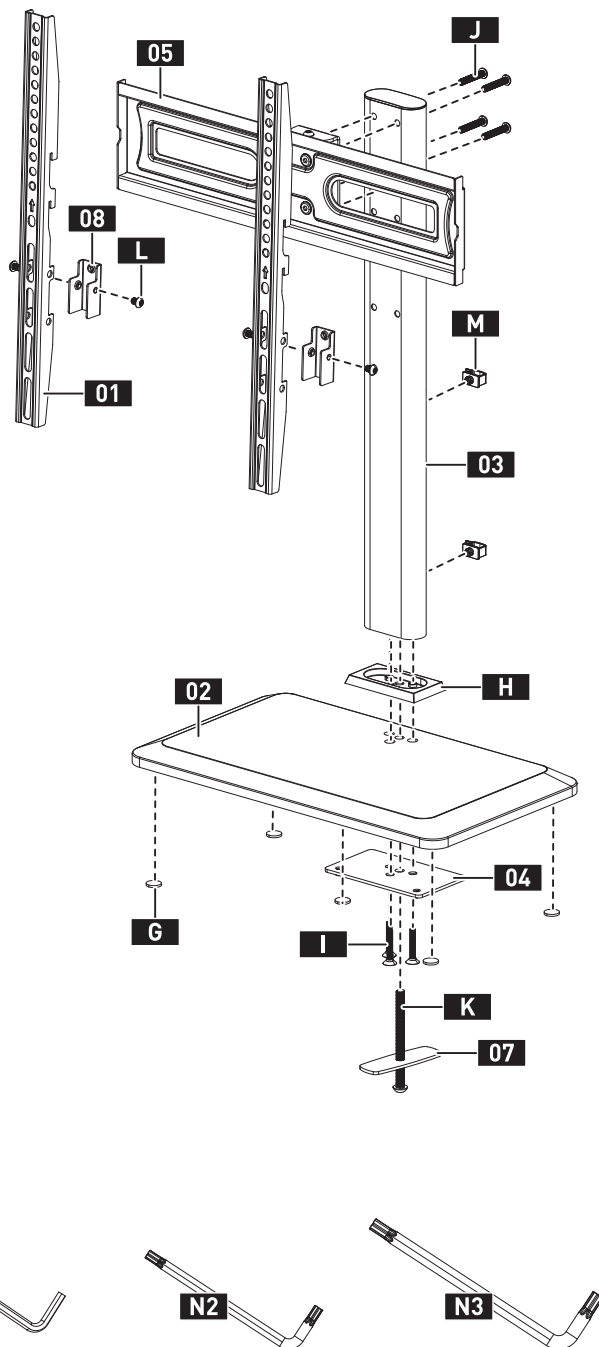

INSTALLATION

 Supplied Parts and Hardware for Step 1



TV Bracket

01 x 2



M6
Security Torx Key

N2 x 1



M8
Security Torx Key

N3 x 1



M6/M8
Washer

B x 4



L2.5mm
Spacer

 
E1 x 8



L10mm
Spacer


E2 x 4

M6



M6 x 20mm
TV Bolt

 
C1 x 4



M6 x 35mm
TV Bolt


C2 x 4

 M8



M8 x 25mm
TV Bolt

 D1 x 4





M8 x 45mm
TV Bolt

D2 x 4


STEP 1 Attach the TV Brackets to Your TV

1-1 Select TV Bolts

  The correct bolt diameter will thread smoothly into your TV.

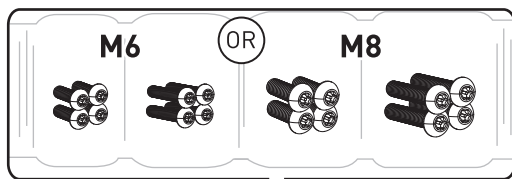
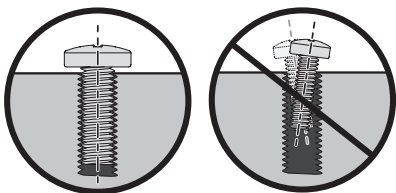


 Save the bolts that fit (M6 or M8) for Step 1-3.



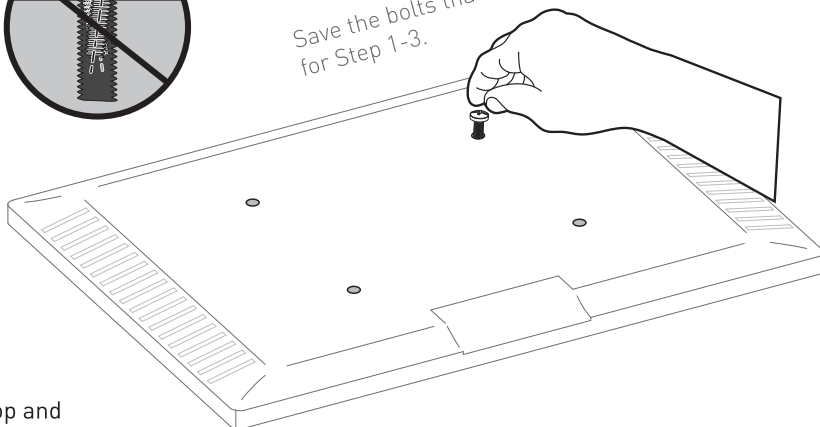


The depth of the top and bottom holes may differ.

  1-2 Position the TV Brackets

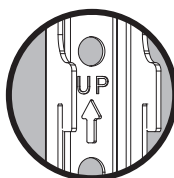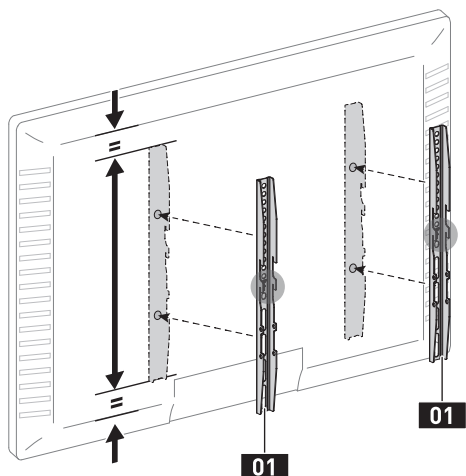


Arrow Up

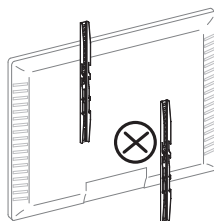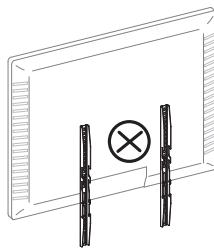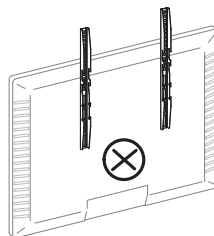   

1-3 Secure the TV Brackets

⚠ WARNING:


 
- DO NOT turn the bolt past the bottom of the hole.
- If the bolt is too short, it may not adequately support the TV.
- If the bolt is too long, it could damage the TV.
- At least 4–5 turns into the threading is required.
- The depth of the bottom holes may be different from the top holes.

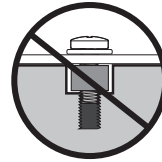

Too Short



  Too Long

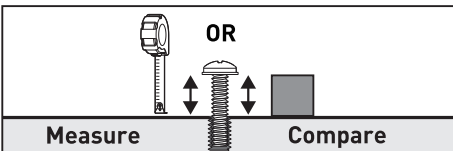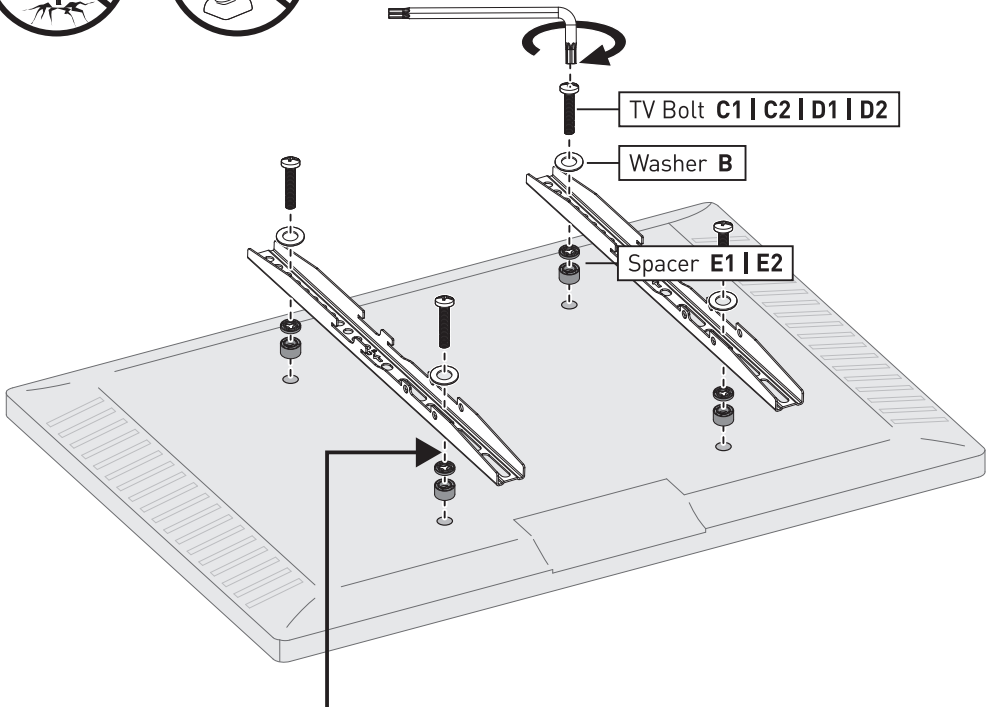

You can use a tape measure to measure the protruding bolts or hold spacers next to them to choose the right spacer combination.



Note:

There are many possible spacer combinations that can be used.

 


(877) 419-7832
Mon-Fri 8am - 8pm (CST)




support@ergoav.com

Supplied Parts and Hardware for Step 2



Base

 02 x 1



Support Pillar

03 x 1



 
Washer

04 x 1



Foot Pad

G x 5



Plastic Cover

H x 1



M6 x 40mm
Countersunk Bolt

I x 3

 


4mm
Allen Key


N1 x 1

STEP 2 Connect the Support Pillar to the Base


1

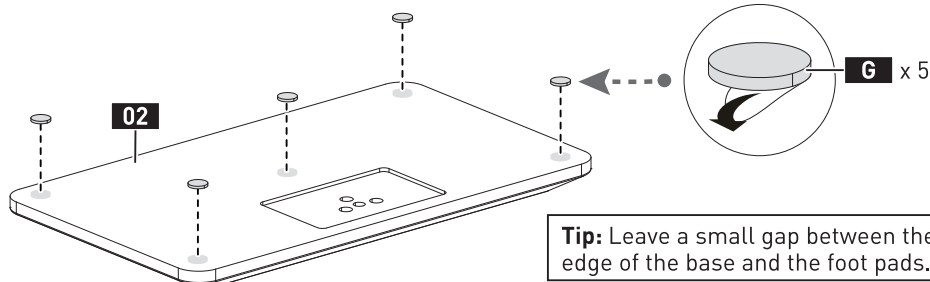


2

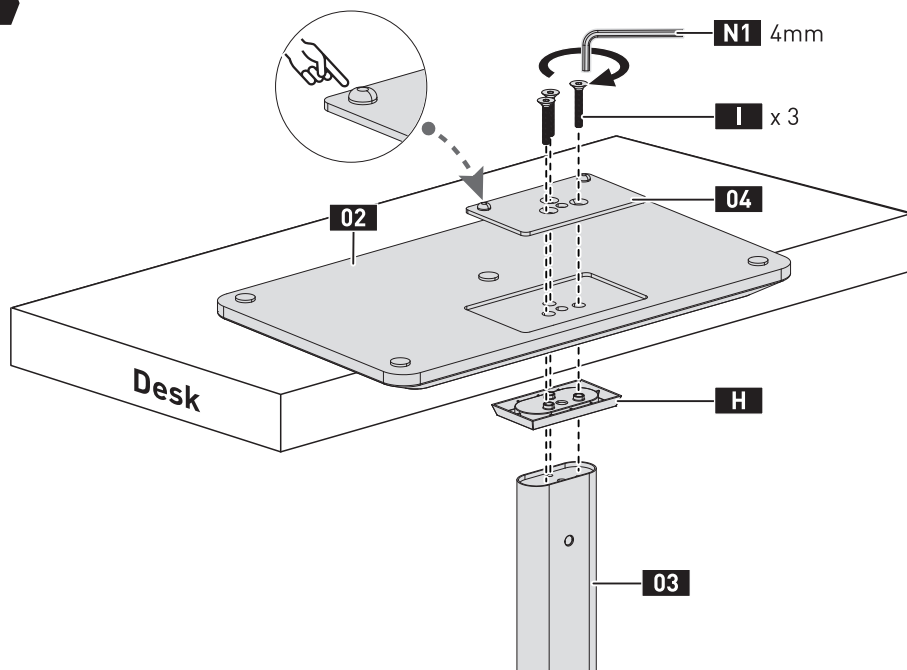 

Supplied Parts and Hardware for Step 3

 

TV Plate
05 x 1

 


M6 x 35mm
Bolt
J x 4





M6
Security Torx Key
N2 x 1

 
STEP 3 Secure the TV Plate to the Support Pillar

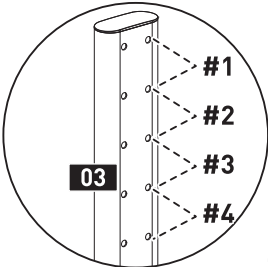


4 Height Options

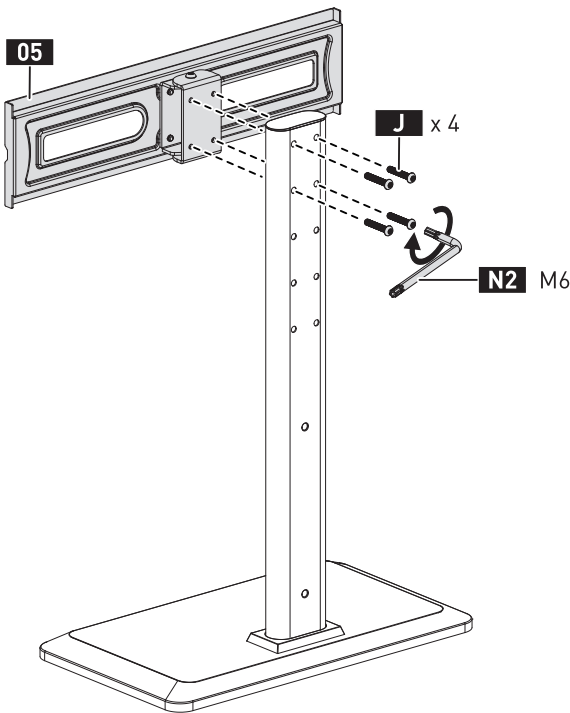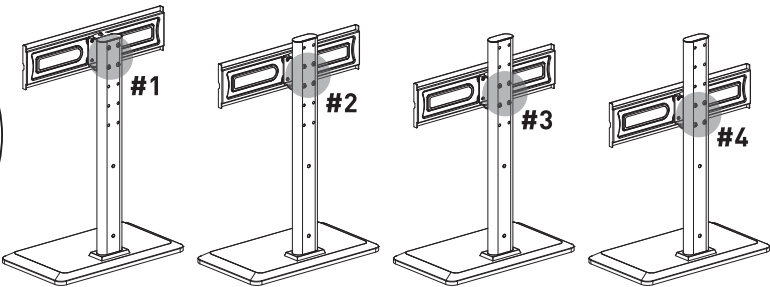  

Supplied Parts and Hardware for Step 4

 

Drill Template
06 x 1

 

Clamping Plate
07 x 1



 
 
M8 x 100mm
Bolt
K x 1




M8
Security Torx Key
N3 x 1

STEP 4 Secure the Base to the Wooden Table

1

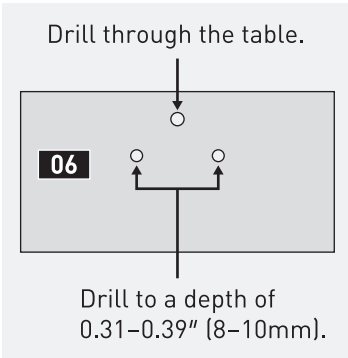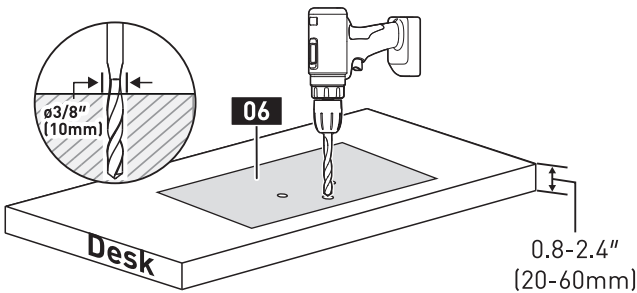

2

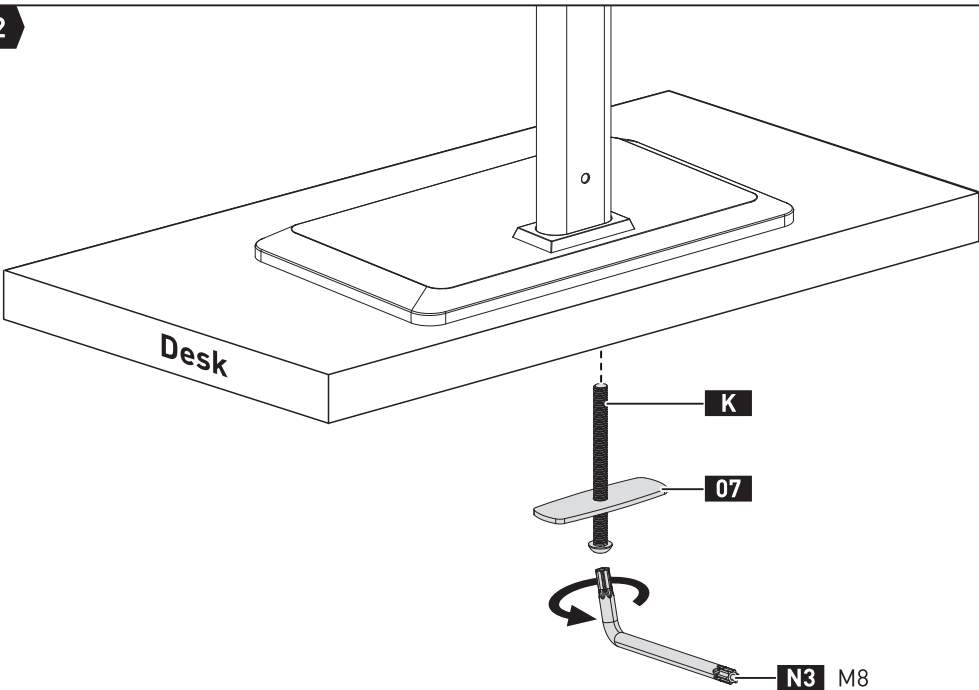 

Supplied Parts and Hardware for Step 5



Safety Lock
08 x 2



 
M6 x 12mm
Bolt
L x 6




M6
Security Torx Key
N2 x 1

STEP 5 Hang the TV on the TV Plate


1

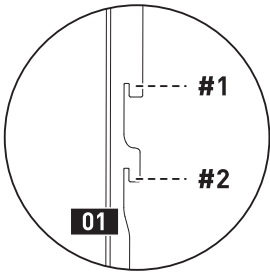


2 Height Options

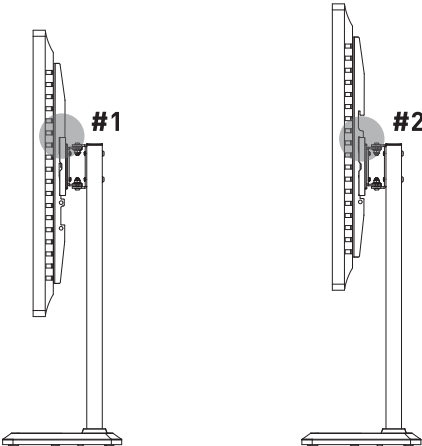 

 
HEAVY! You may need assistance with this step.

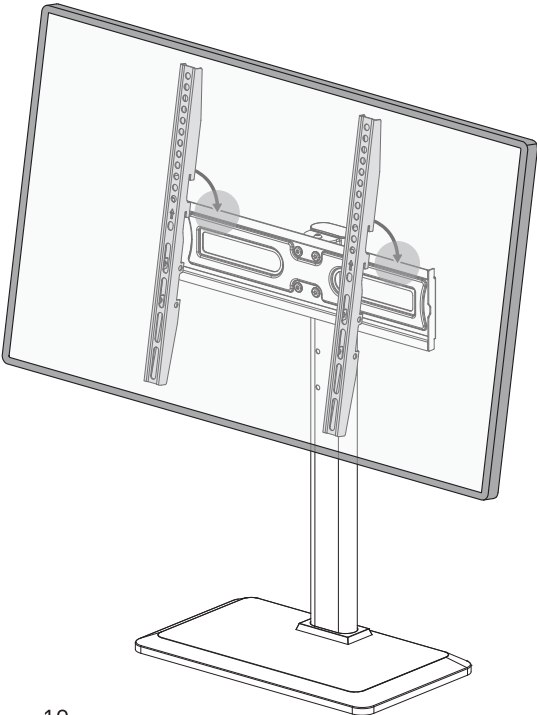

 Note: Hang the TV on the center of the TV plate.

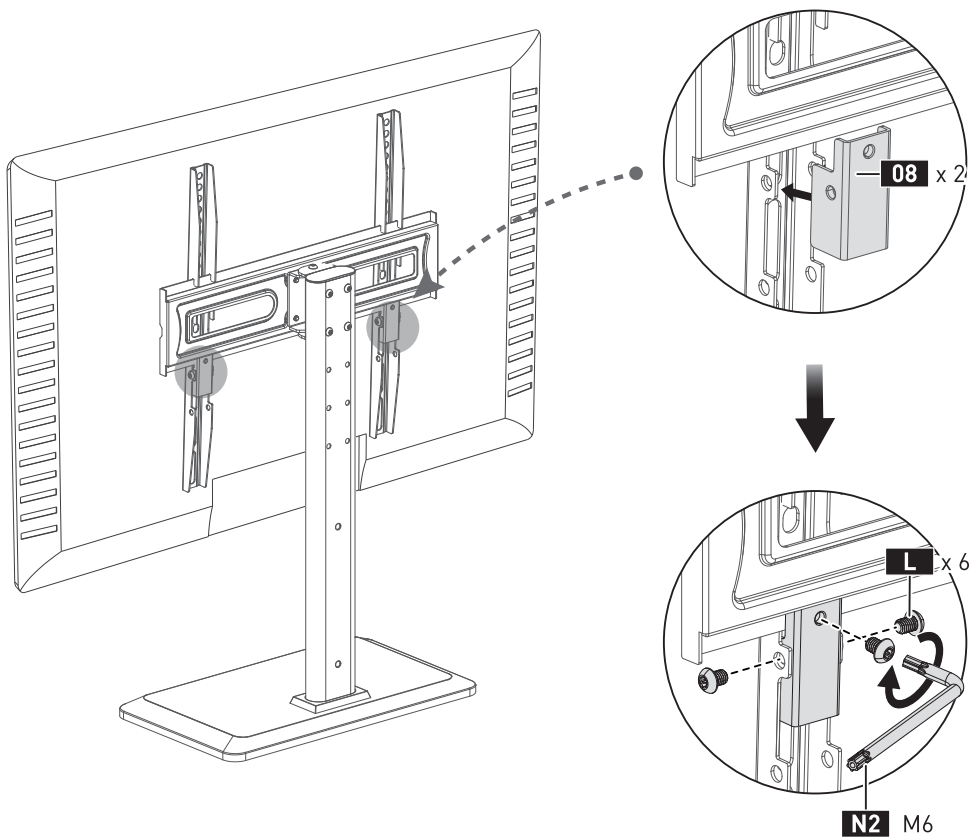


Supplied Parts and Hardware for Step 6

 


Cable Clip
M x 2

 STEP 6 Cable Management

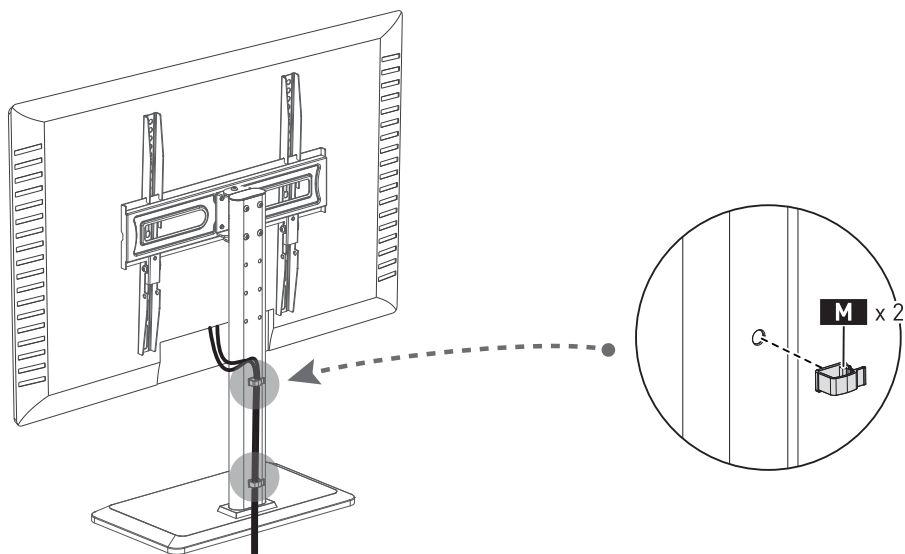

 STEP 7 Swivel Adjustment



The TV can be swiveled left or right. Only swivel the TV by the TV edges. Do not press on the screen.

